


MVN7505/7510/6105/6105-A/6110/6110-A/4605/4610

电动球阀执行器


Ball Valve Actuator

安装说明 • INSTALLATION INSTRUCTIONS

安装之前请断开电源。 Disconnect power before installation

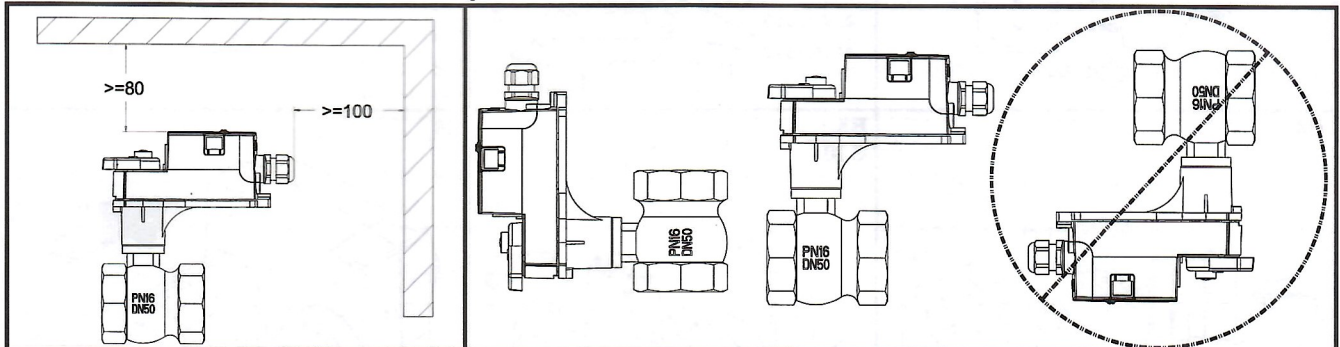


A1-A 5: 执行器与阀门的安装. Mounting Actuator to Ball Valve

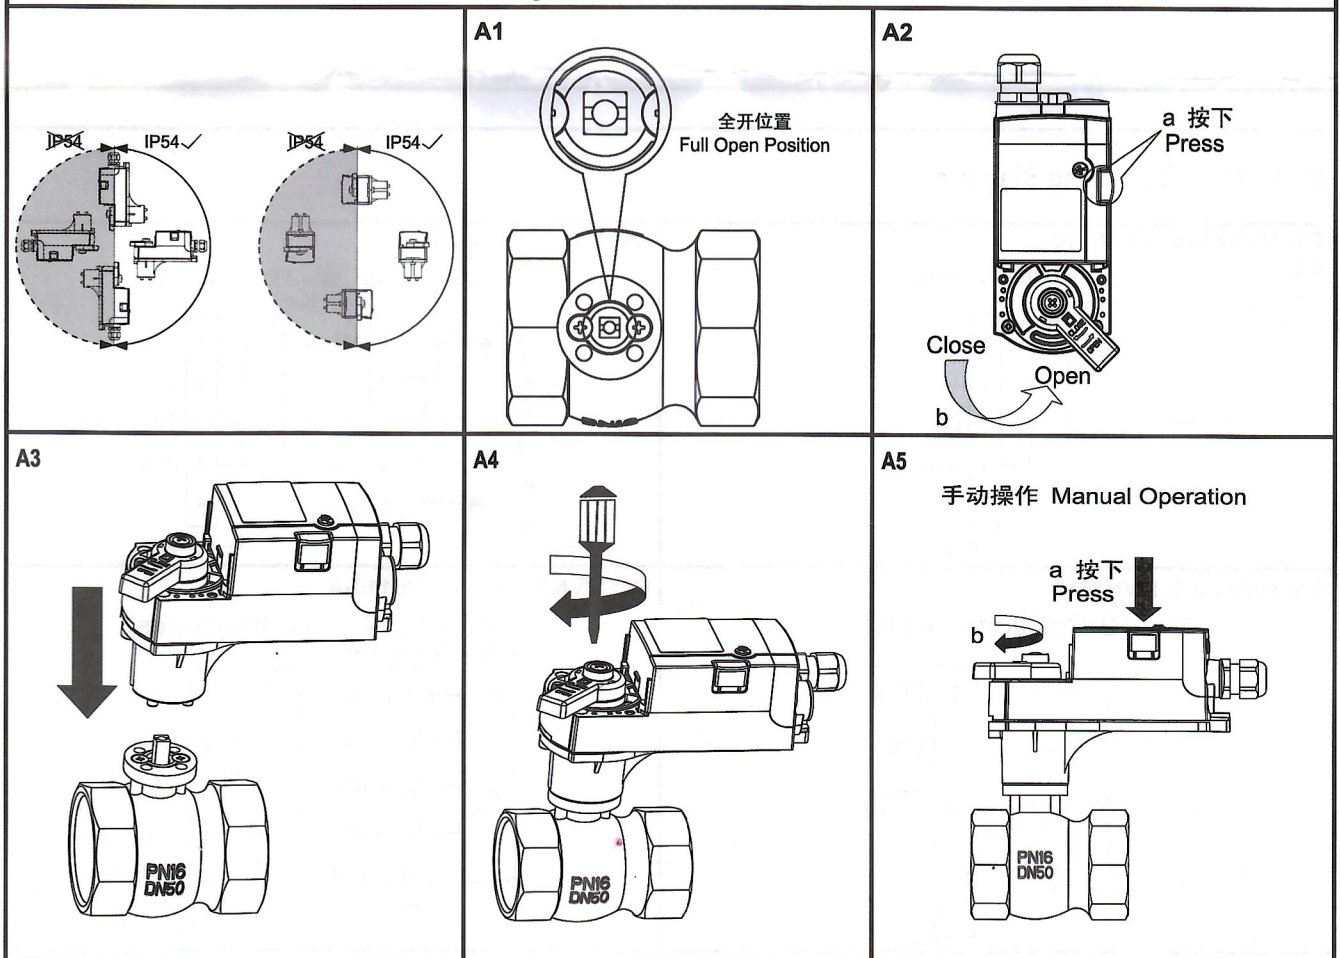



B1-B6: 执行器接线. Wiring

B1

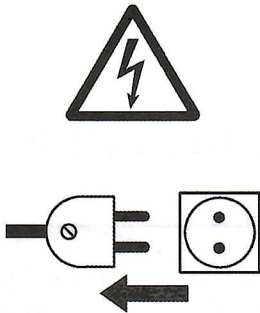


B2: 调节旋钮(默认)


Adjust Knob (Default Position)

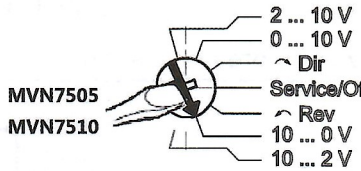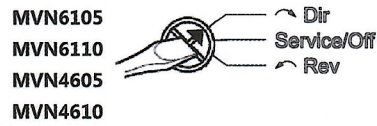


B3

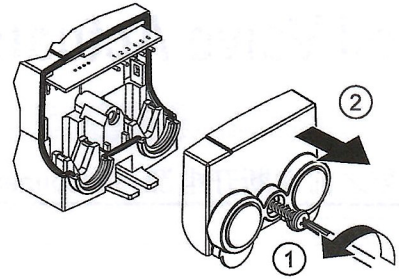


B4

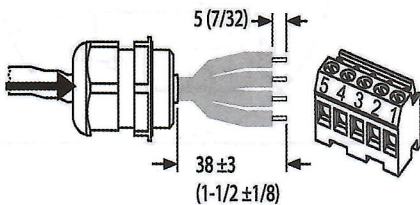

B5
C10

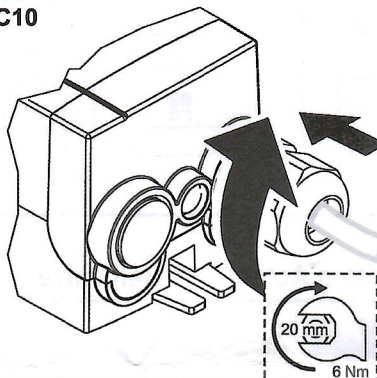

B6

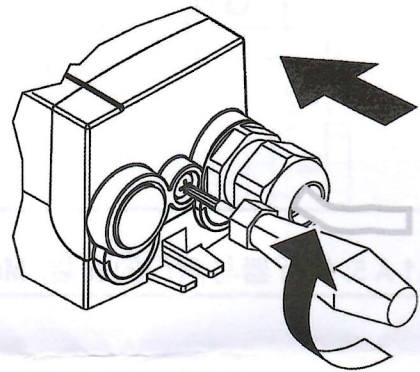


C1-C: 接线图. Wiring Diagram

C1: MVN6105, MVN6110

C2


Floating/2-Pos.

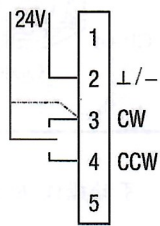

C2: MVN7505, MVN7510


Modulating

Floating/2-Pos.

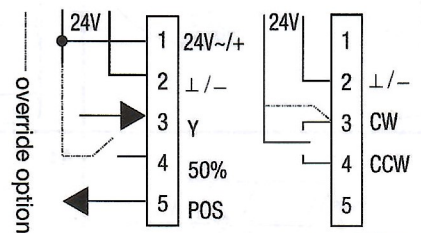

C3: MVN4605, MVN4610


2-Position (↻ Dir)

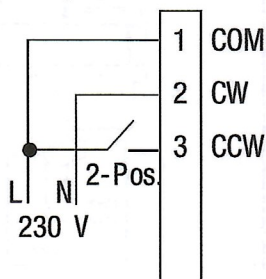

C4: MVN6105-A, MVN6110-A

End Switches
(max. 30VDC, 3A)

Floating/2-Pos.

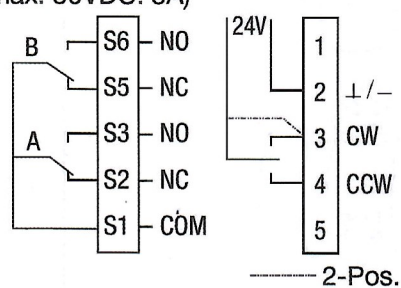

China RoHS card: PWBA_Pb

部件名称 Component Name	有害物质 Hazardous Substances					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr6+)	多溴联苯(PBB)	多溴二苯醚(PBDE)
电路板组件 PWBA	X	O	O	O	O	O
本表格依据 SJ/T 11364 的规定编制。 This table is prepared in accordance with the provisions of SJ/T 11364.						
O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。 Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.						
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。 Indicates that said hazardous substance contained in all of the homogeneous materials for this part is above the limit requirement of GB/T 26572.						

未列入表内的其他部件，皆不含任何超出限量要求的限制使用物质。

All other components, not listed in the table, do not contain restricted substances above the threshold level.

霍尼韦尔环境自控产品（天津）有限公司
天津经济技术开发区南海路 158 号
邮编： 300457
电话： (86-22) 6628 7000
传真： (86-22) 2532 521

Honeywell Environmental and Combustion
Controls (Tian Jin) Co., Ltd
No. 158, NanHai Road TEDA Tianjin, 300457, P.R.C.
Tel: (86-22) 6628 7000
Fax: (86-22) 2532 5214

Honeywell

产品合格证

CERTIFICATION OF QUALITY

检查员
INSPECTOR 003



霍尼韦尔环境自控产品(天津)有限公司
Honeywell Environmental & Combustion
Controls (Tianjin) Co., Ltd